




Assembling customized decoframes

- The assembly of this film takes place on the outside of the shop window -
You need: **lukewarm water, linen towels and a felt squeegee**



1. Cleaning: the window pane must be clean and free from dust, silicone and grease. For outside installation, we recommend to preheat the foil to a room temperature of at least 20°C.

Moistening: Wet the glass generously with warm water! To facilitate installation, keep the glass a little damp, so you can always make slight corrections by pulling and pressing the film.

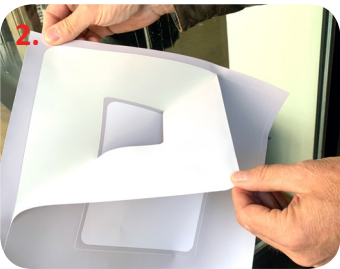


2. Now loosen one corner of the adhesive film and slowly pull it off the Decoframe (without square inner surface - must be disposed of).



3. Place Decoframe on the wet window pane and position it exactly. Corrections are possible, because the window pane is still wet. Evenly and carefully brush the film against the window with your hands, to remove possible air / water bubbles.

Then excess water thoroughly with a cloth and with a squeegee (4).

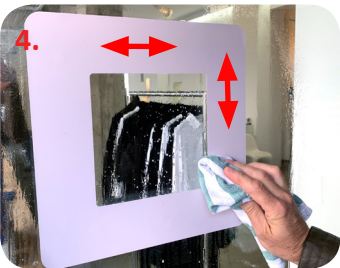

4. Now use a felt squeegee or similar object to wipe out the residual moisture in one direction to remove possible air / water bubbles. This step is done again horizontal and vertical with slight pressure.



5. Done, you did it. The residual moisture evaporates in the next few hours. Please check again the next day and if necessary press on small increases with the squeegee.